


Handling-short-instruction V1.0 for

L1-BUS Controller

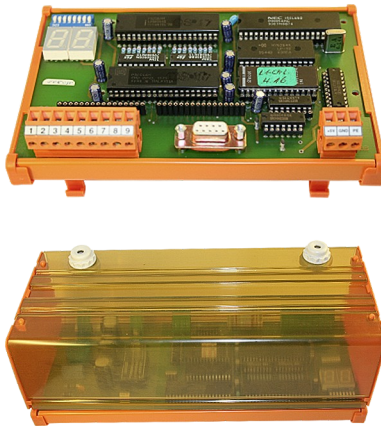

Power connection:

Voltage: 24 V DC \pm 20% (Desktop-Device)
 5 V DC \pm 20% (DIN-Rail-Mounting)

Power: 4W

Initial start-up :

- Plug the needed modules into the right connectors. The components on the module-board point in your direction
- Connect the L1-Bus to the 9pin connector with screws
- Connect the PC to the D-Sub 9pin
- Check Dip-Switch described like in the handbook (default setting: 9600bd, 8, N, 1)
- Connect power-supply:
Desktop-Device: 24V DC to the 2pin connector with screws (Pin1 GND, Pin2 Vcc)
Din-Rail-Device: 5V DC to the 3pin connector with screws (Pin1 Vcc, Pin2 GND)

Now you will be able to communicate with a PC over RS232 with the controller. More informations you can find in the handbook of the device.

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschenbeuren

+49 (0) 7172-92666-0

info@process-informatik.de

<https://www.process-informatik.de>

Copyright by PI - 2024

Menutree Website:

+ Products / docu / downloads

+ Hardware

+ Converter

+ L1-Controller




QR-Code Website:




Please make sure to update your drivers before using our products.

Standardised time

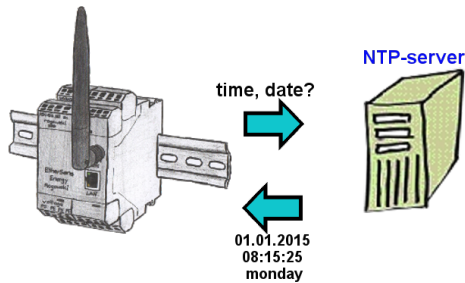


Should all EtherSens devices record time-synchronized in your equipment? By coupling with an NTP-time-server, all devices pick up the current time and adjust this.

PLC coupling (data exchange between PLCs)

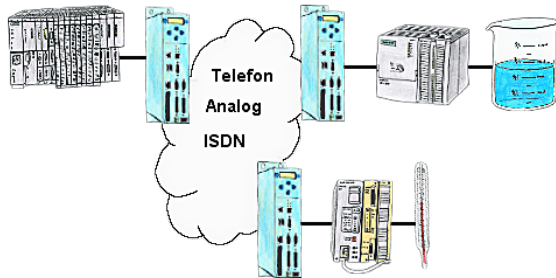


Your pumping stations report the water levels of the central control via telephone network. The central office itself can of course transmit commands/messages to the substations as well. Thereto no dedicated line is required, a "normal" telephone connection is sufficient because the devices cut the line after occurred message.

Actual time for the PLC?

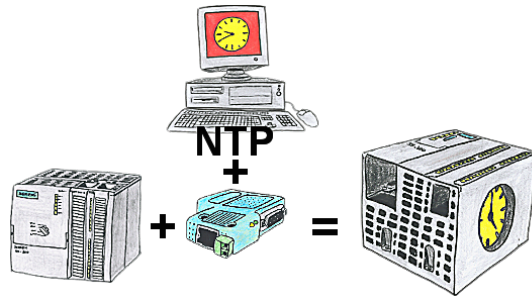

You need in your PLC a actual time? No problem, with the NTP-function the S7-LAN-module get from a NTP-(Time-)Server the actual time and transfers it direct into the configured PLC or for processing in a DB.

Worldwide remote-access thanks to our own cloud

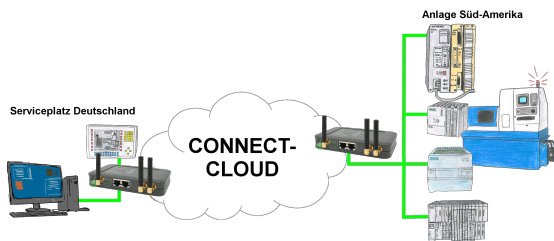

Worldwide remote-maintenance without additional costs thanks to our own cloud

Your devices connect to your own cloud, no matter where they are in the world. Only your devices are in your own private cloud, no one else has access to the cloud. In addition, you can provide each device with its own connection-password, so that the individual systems are protected despite the private cloud.

No registration on any portals, no hidden additional costs, your devices in your own cloud are always accessible.

This is how remote maintenance/remote access is fun.